

**Betriebsanleitung**  
**Operating Instructions**  
**Instructions de service**  
**Istruzioni d'uso**  
**Handleiding**  
**Instrucciones para el manejo**  
**Manual de instruções**  
**Naudojimosi instrukcija**  
**Kasutusjuhend**  
**Lietošanas instrukcija**  
**Driftsinstruks**  
**Driftsinstruktioner**  
**Käyttöohje**  
**Driftsvejledning**  
**Instrukcja obsługi**

**Kezelési útmutató**  
**Návod k obsluze**  
**Navodilo za uporabo**  
**Návod na obsluhu**  
**Upute za rad**  
**Manual de operatii**  
**Treoracha Oibriúcháin**  
**Οδηγίες χρήσης**  
**Ei Kitabi**  
**Инструкции за експлоатация**  
**Инструкция по эксплуатации**  
**取扱説明書**  
**사용설명서**  
**使用说明书**

# Picchio 2200







2006/42/EG









DIN EN ISO 9001  
 001929 QM  
 DIN EN ISO 14001:2015



				mbar
			$L_{pA} = 76 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 79 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$	

				$A > 100\text{mm}$ $A > 4"$				
<p>69 kg 152 lbs</p>				$> 5^\circ\text{C}/41^\circ\text{F}$ $< 45^\circ\text{C}/113^\circ\text{F}$	max. 90%	max. 800m		

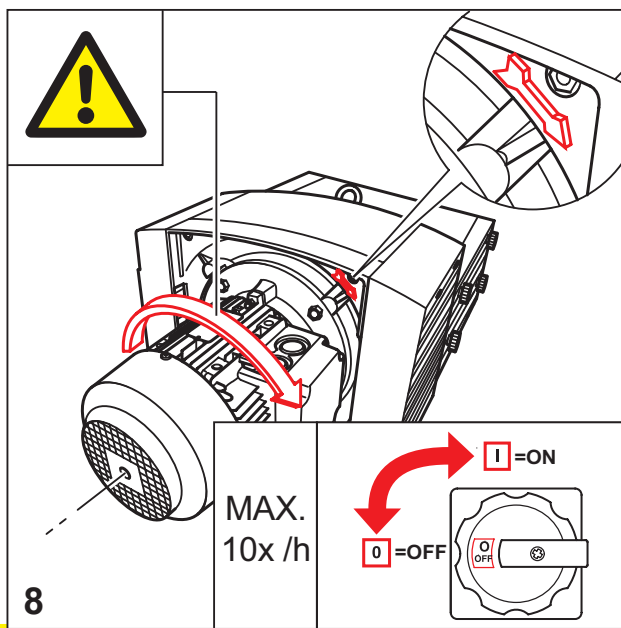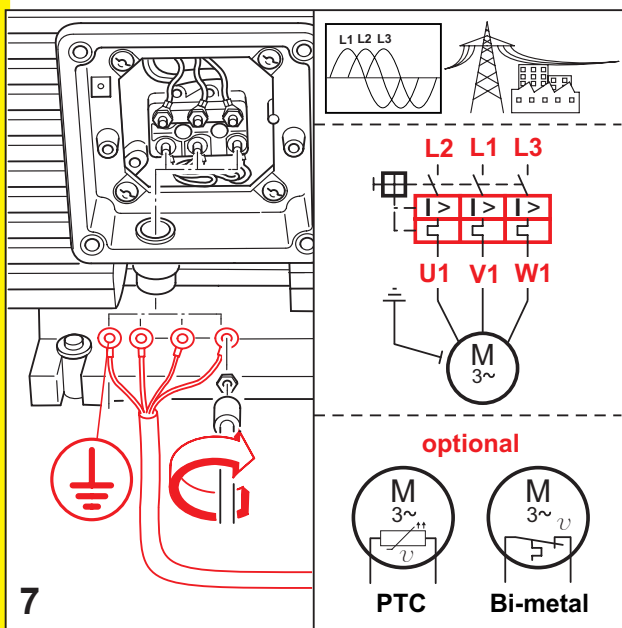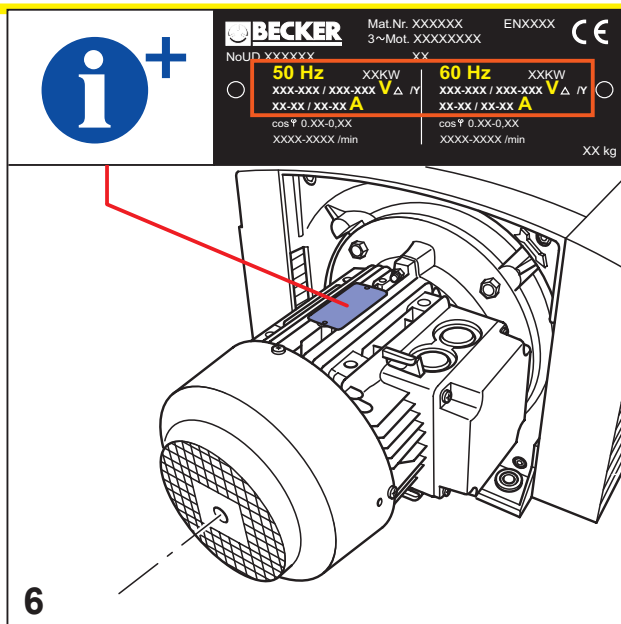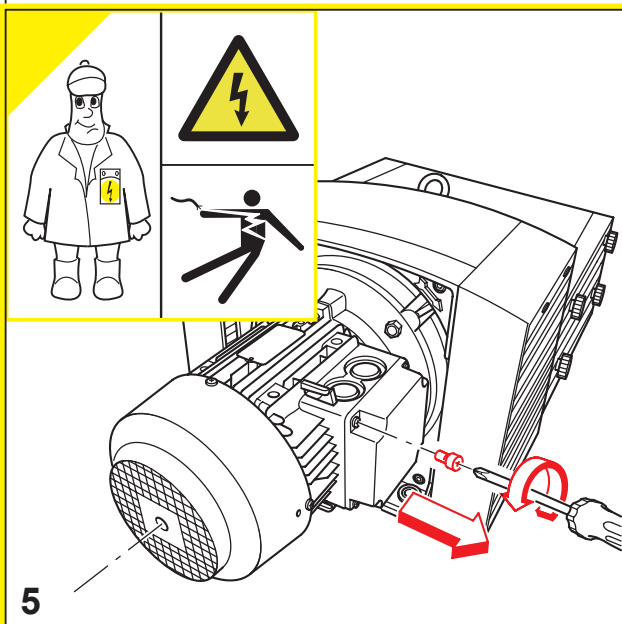
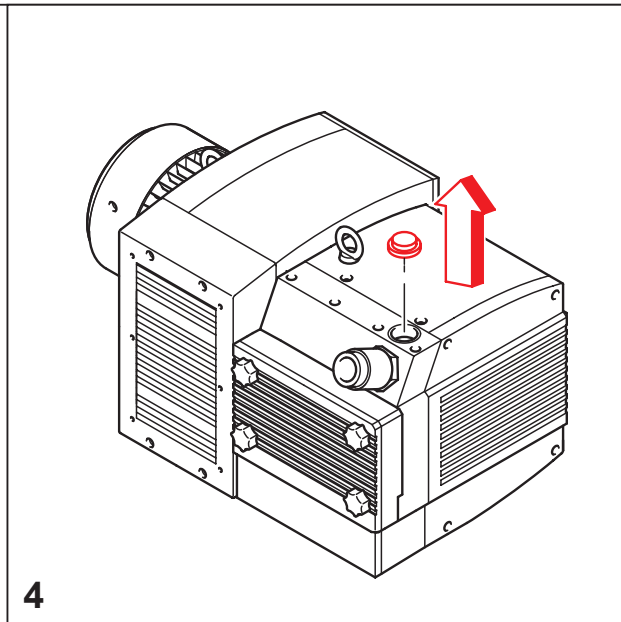
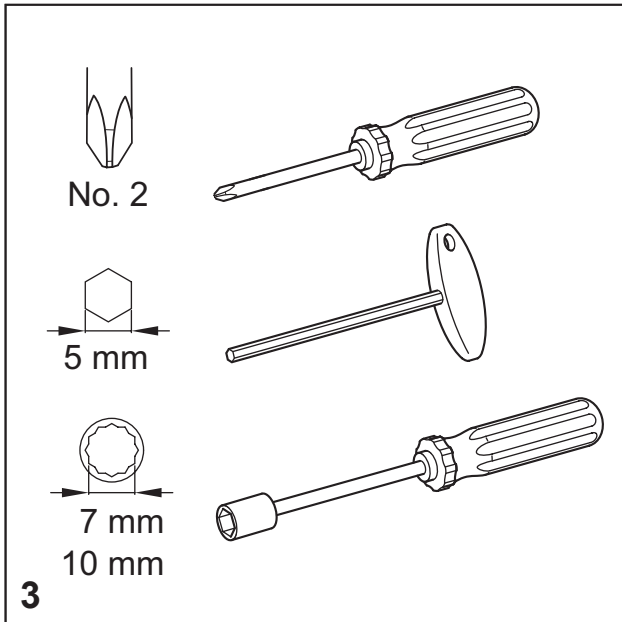



<b>BECKER</b> Mat.Nr. XXXXXX ENXXXX 3~Mot. XXXXXXXX		
NoUm XXXXXXX 50 Hz XXkW XXX-XXX / XXX-XXX V Δ /Y XX-XX / XX-XX A cos φ 0.XX-0.XX XXXX-XXXX /min	60 Hz XXkW XXX-XXX / XXX-XXX V Δ /Y XX-XX / XX-XX A cos φ 0.XX-0.XX XXXX-XXXX /min	XX kg

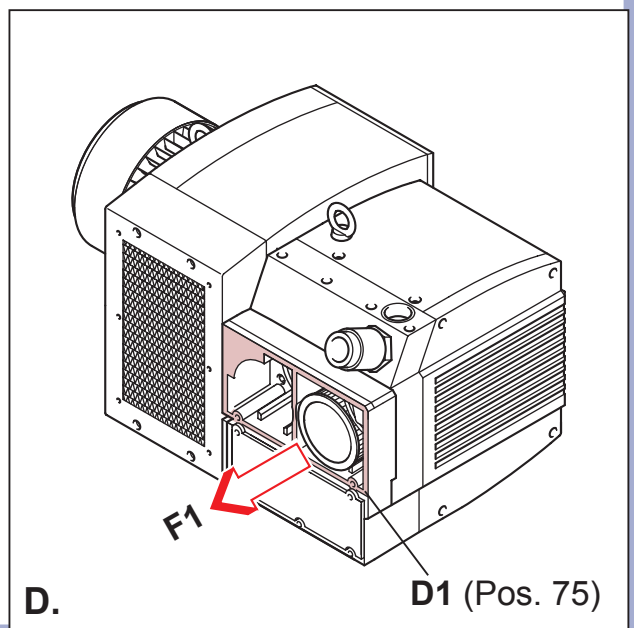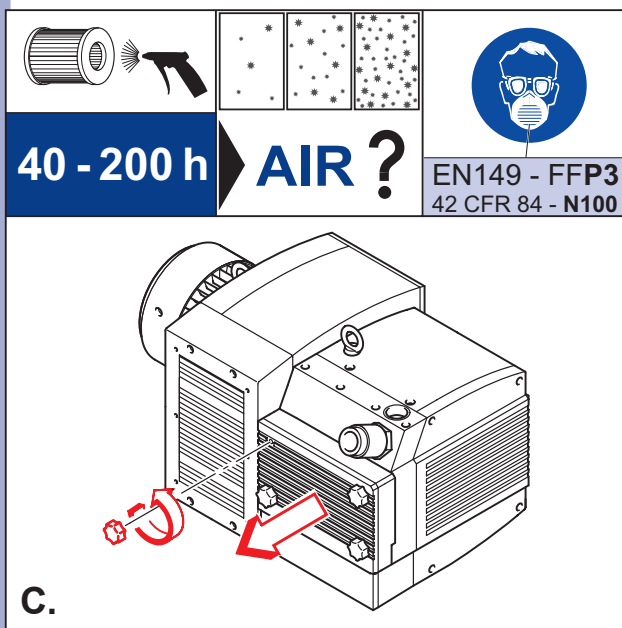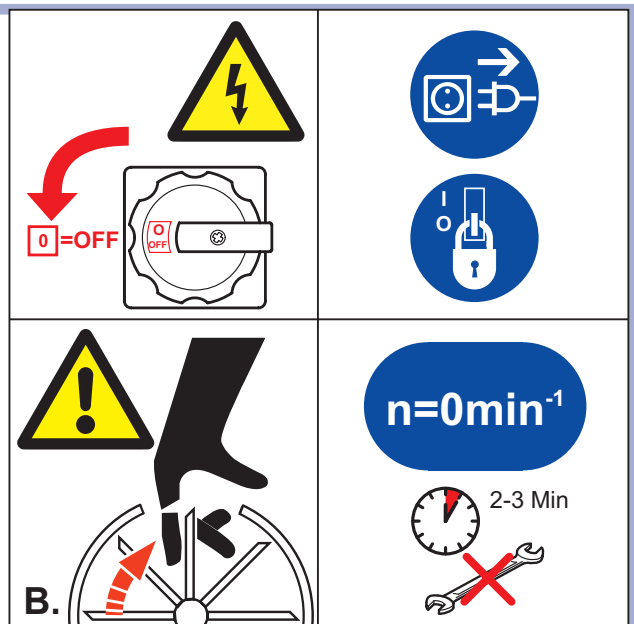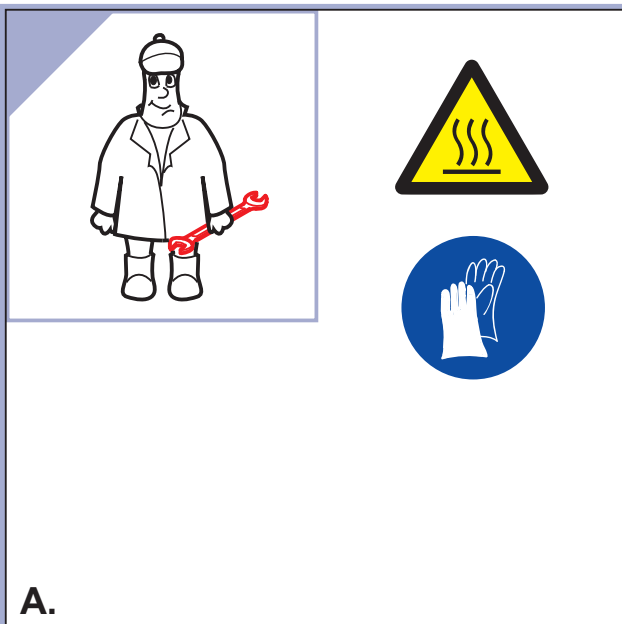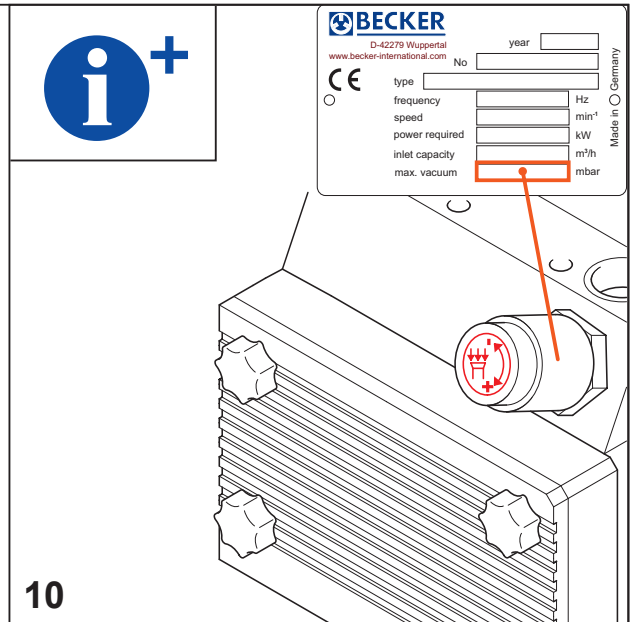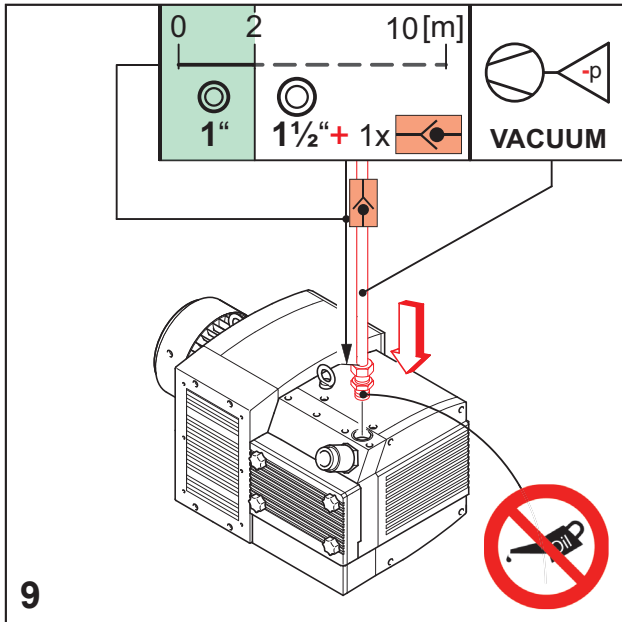

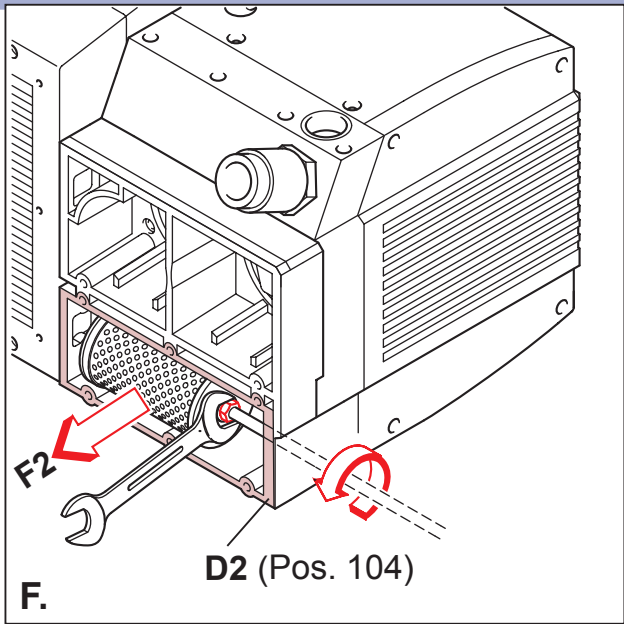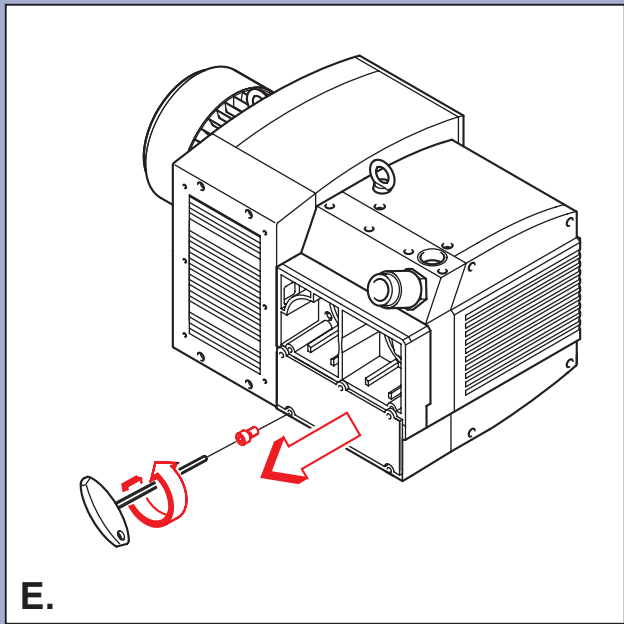





<p><b>F1</b> (standard) No.: 909507</p>	<p><b>F2</b> (standard) No.: 909510</p>
	<p>Satz / Kit Pos.: 20, 24, 62, 75, 76, 85, 104, 125, 126, 127, 146, 288 No.: 549000 21100</p>

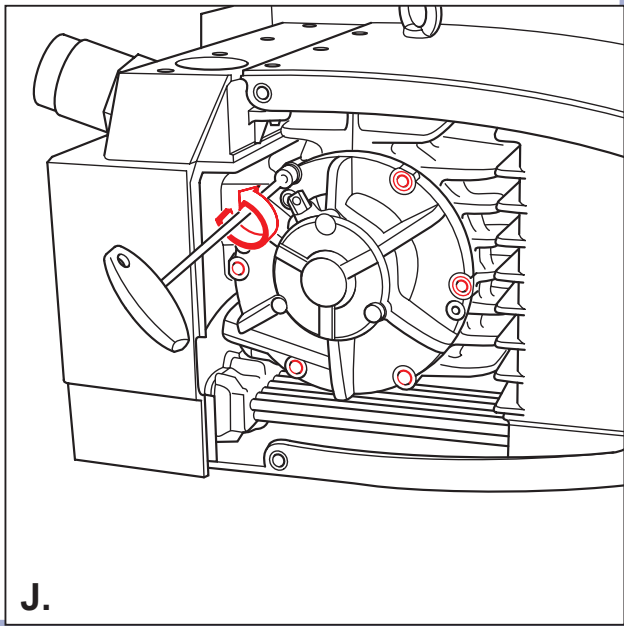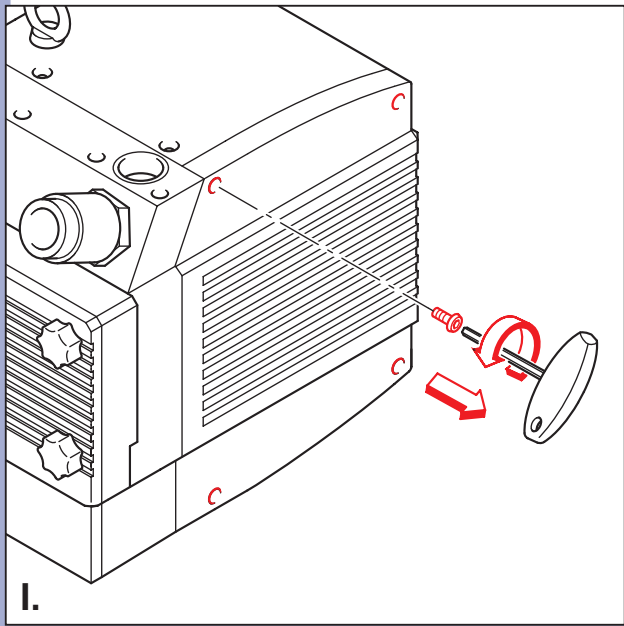
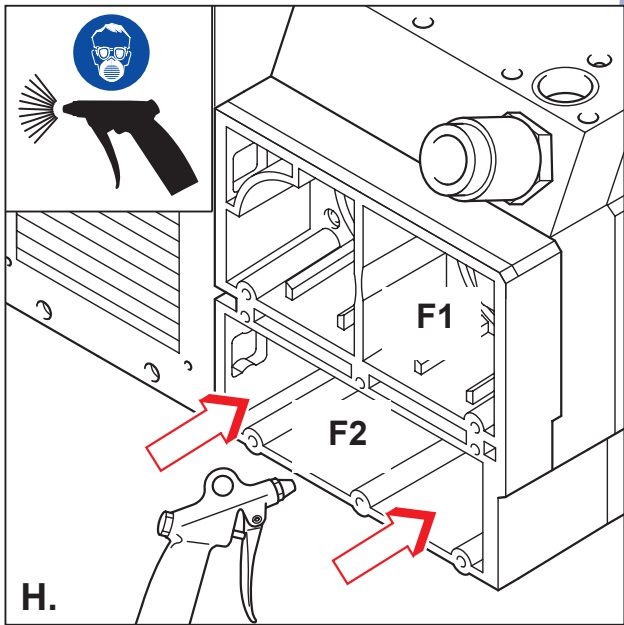


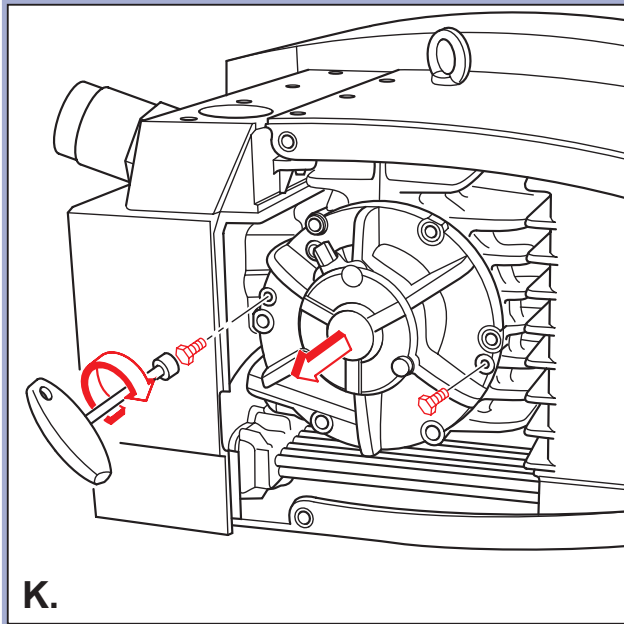

<p><b>3000 h</b></p>	
	<p><math>A_{MAX} = 39mm</math>  <math>A_{MIN} = 31mm</math>  <math>A_{T} &lt; 31mm</math> → </p>
<p>Picchio 2200 → No. 9013300004 (SET)</p>	

**L.**

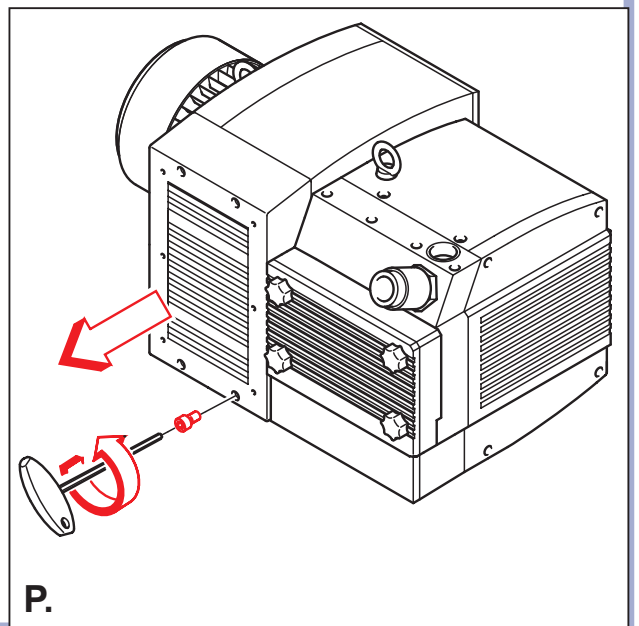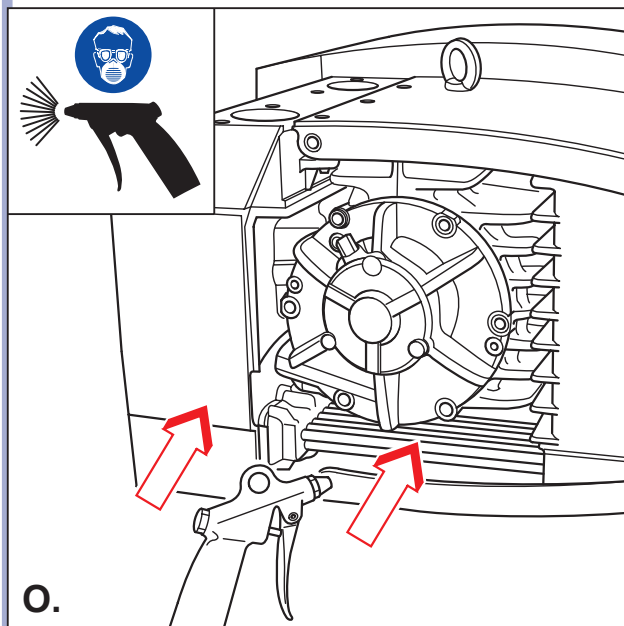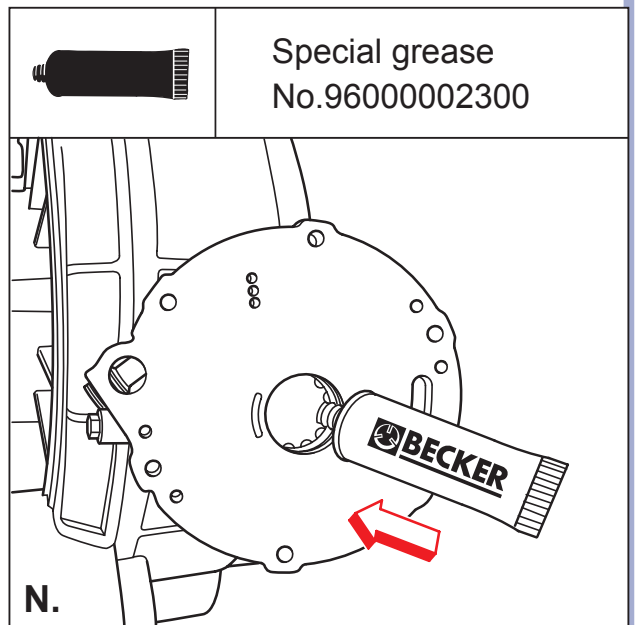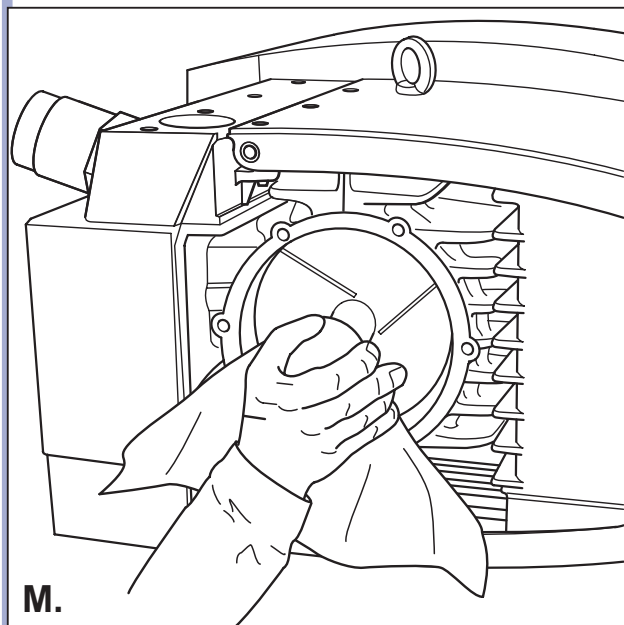

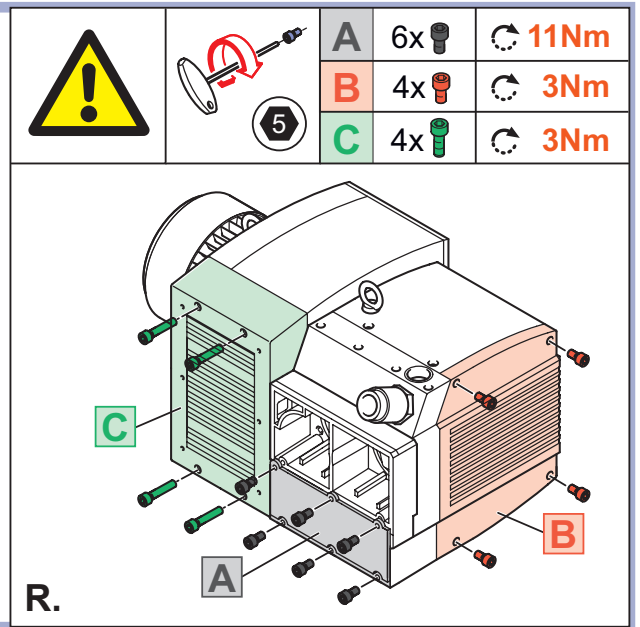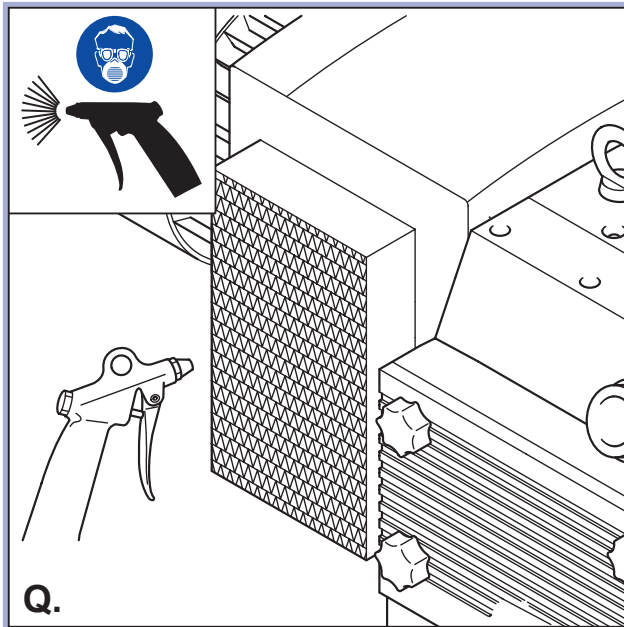

Gebr. Becker GmbH  
 Hölker Feld 29-31  
 D-42279 Wuppertal  
 info@becker-international.com

---

**SERVICE**  
[www.becker-international.com](http://www.becker-international.com)  
 Sales and service network